

 


INSTALLATION INSTRUCTIONS

for CLR SERIES (CLR 6350)
INSULATED PEDESTAL CONNECTOR

- 1 Strip the cable 1-1/4" to 1-1/2".
- 2 Line up the screw ports with the screws. Back out the first screw to position the insulator on the bar and install the first cable.
- 3 Push the cable through the cable port, bringing the cable insulation up to the connector body.
- 4 Tighten the ball-bottom screw to the cable with a hex wrench in accordance with the torque chart below.

WIRE SIZE	TORQUE
#12 to #4	120 in. lbs or 10 ft. lbs
#2 to 350 Kcmil	240 in. lbs or 20 ft. lbs

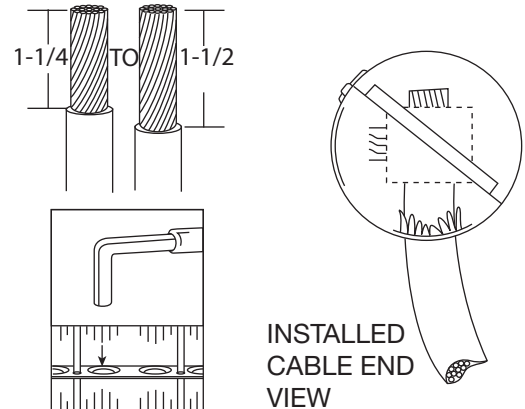 


Thomas&Betts

Limited Warranty Applies. Refer to:
www.tnb.com/ecpwarranty for full warranty terms.

Thomas & Betts Corporation
Memphis, Tennessee
www.tnb.com

0015149 A
153_R4
Page 1 of 1

 


INSTALLATION INSTRUCTIONS

for CLR SERIES (CLR 6350)
INSULATED PEDESTAL CONNECTOR

- 1 Strip the cable 1-1/4" to 1-1/2".
- 2 Line up the screw ports with the screws. Back out the first screw to position the insulator on the bar and install the first cable.
- 3 Push the cable through the cable port, bringing the cable insulation up to the connector body.
- 4 Tighten the ball-bottom screw to the cable with a hex wrench in accordance with the torque chart below.

WIRE SIZE	TORQUE
#12 to #4	120 in. lbs or 10 ft. lbs
#2 to 350 Kcmil	240 in. lbs or 20 ft. lbs

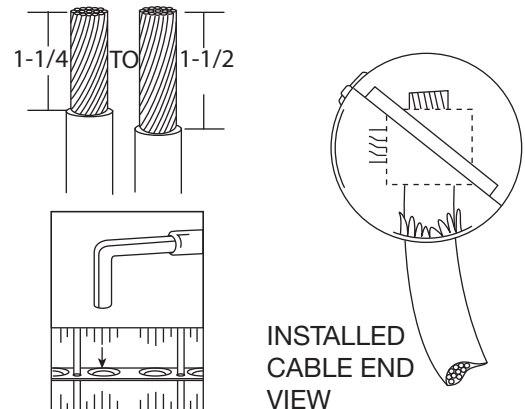

Thomas&Betts

Limited Warranty Applies. Refer to:
www.tnb.com/ecpwarranty for full warranty terms.

Thomas & Betts Corporation
Memphis, Tennessee
www.tnb.com

0015149 A
153_R4
Page 1 of 1