



INSTALLATION INSTRUCTIONS FOR FTU-HS KIT

STEP 1 Slide the inner and outer layers of the heat shrink over the FTU connector.


STEP 2 Install FTU connector pursuant to manufacturer's instruction.

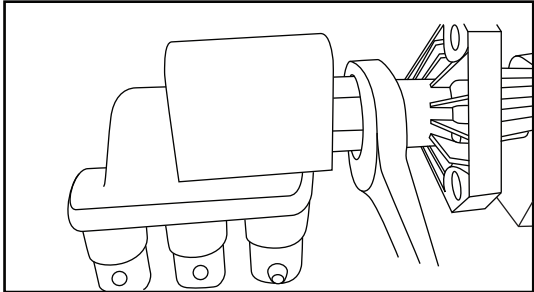


STEP 3 Slide the inner heat shrink component against the bushing.

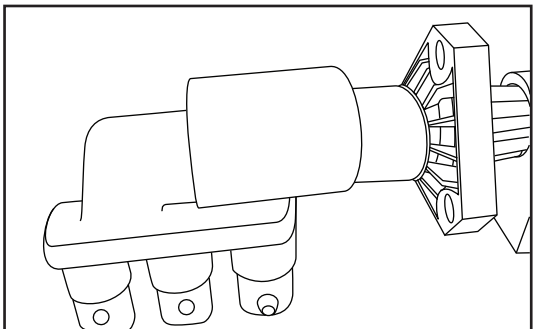

STEP 4 Start by focusing the heat source to the heat shrink near the bushing. Use caution to avoid overheating bushing and heat shrink material. A heat gun is recommended.

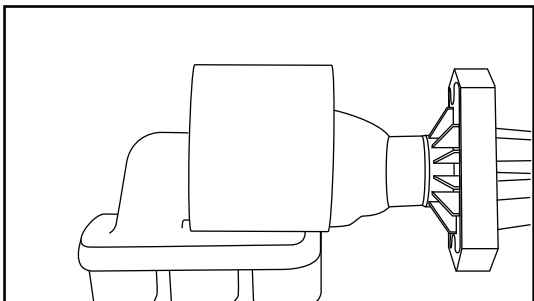


STEP 5 Focus heat source to the inner heat shrink until fully installed.

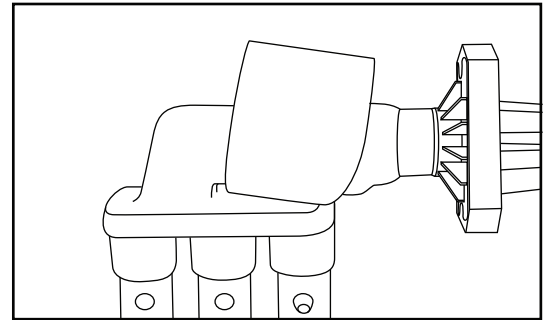

STEP 6 Finish installation by overlapping the inner and outer heat shrink components by approximately 1 inch (2.54 cm) and applying heat to the outer heat shrink until sealant is visible around the entire perimeter

CAUTION

Do not apply excessive heat to PVC insulation or bushing material.

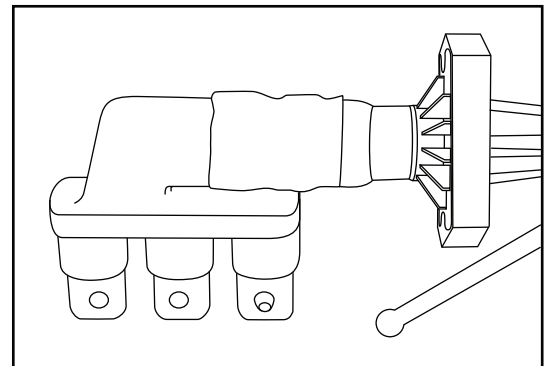

Limited Warranty Applies. Refer to:
www.tnb.com/ecpwarranty for full warranty terms.

Thomas & Betts

Thomas & Betts Corporation
Memphis, Tennessee
www.tnb.com