

ACCESS FLOOR MODULE INSTALLATION INSTRUCTIONS USING THE AFM COVER WITH CORDS

CATALOG NUMBERS

AFM-4-BRS, AFM-4-ALM, AFM-4-BRS-R, AFM-4-ALM-R, AFM-2-BRS, AFM-2-ALM, AFM-4-ALM-N

⚠ WARNING ⚠
ELECTRICAL HAZARD!
BE SURE POWER IS OFF!

IMPORTANT: Read all instructions before installing the AFM








- 1) Open AFM Lid: Pull Latch Button back until Lid pops up. Lift and lay Lid to the side (see Figures 2 and 3).
- 2) Plug in data and power cords as needed and route over Cord Ramp. Rotate Lid so that Cord Slot is directly over Cord Ramp (see Figure 4).
- 3) Close AFM Lid: Make certain cords are within the slot opening. Insert Lid Tab into slot in Carpet Flange and push opposite end downwards to engage latch and snap Lid closed (see Figures 5 and 6).

CLOSING THE COVER

- 1) Open and Lift AFM Lid (see Step 1 on back page and Figure 2 and 3).
- 2) Unplug and remove all cords. Rotate Lid so that Cord Slot is in closed position. Insert Lid Tab into slot in Carpet Flange and push downward to snap Lid closed.

RECESSED FLOOR TRIM IN LID

The AFM-4-XXX-R Lids have a 3/16" Deep Recessed Area on top for attaching floor covering. Cut flooring to: 4-5/8" x 5-3/8" to fit recess and secure with appropriate adhesive (see Figure 7).

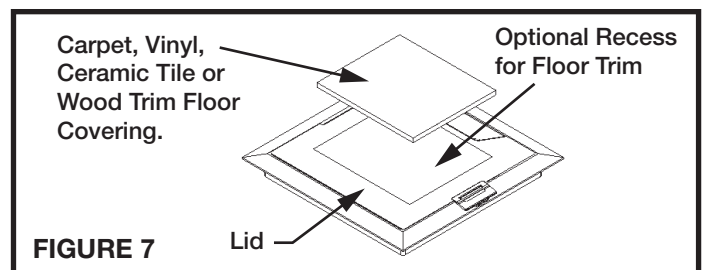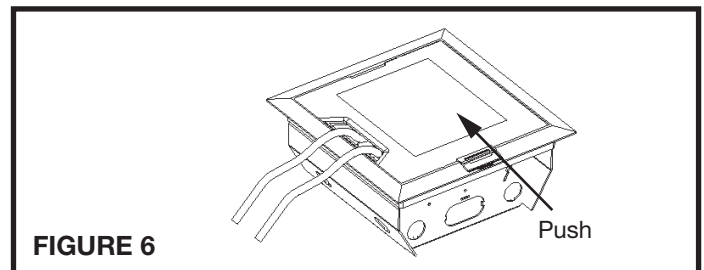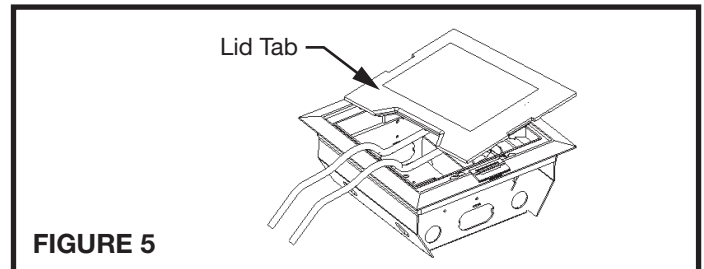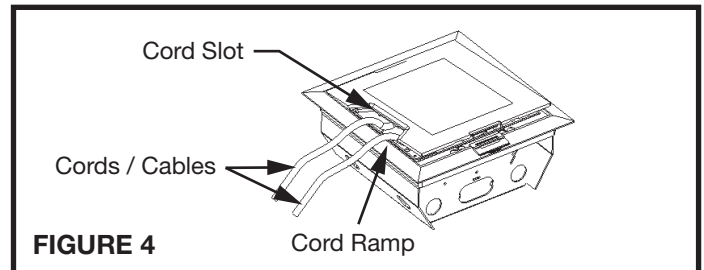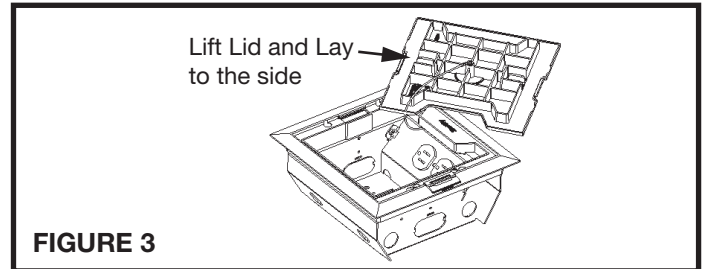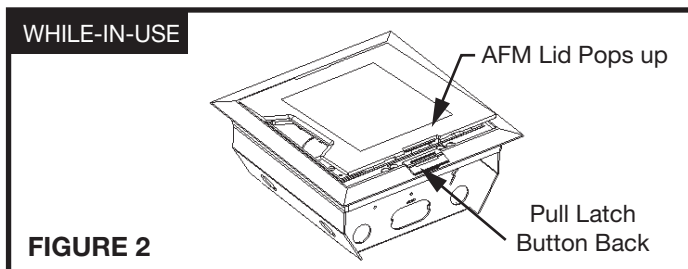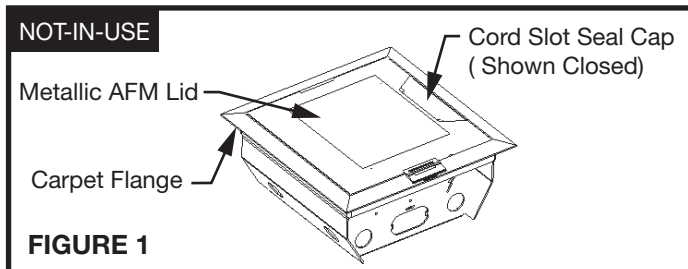

⚠ WARNING ⚠
ELECTRICAL HAZARD!
BE SURE POWER IS OFF!

INSTALLATION

AFM-2: 7-1/8" X 4-1/8"

AFM-4: 7-15/16" X 7-15/16"

- 1) Cut hole in raised panel for floor box per sizes above.
- 2) Install AFH Bracket (furnished with box) on raised floor panel as shown to match the set screws used to hold the box in place. Place brackets in center of cutout opening on sides where set screws are used (see Figure 8).
- 3) Hold AFH Bracket tightly against the side and bend legs around edge to engage bottom of floor panel.
- 4) Before lowering AFM Box into hole on wood or tile floors, apply caulk or sealant to the underside of Carpet Flange to block water entry (see Figure 8).
- 5) Lower AFM into cut hole and attach Conduit and Fittings as required to meet National and Local Electrical Code requirements.
- 6) Install 1-1/8" long set screws (furnished with box) to engage bracket as shown (see Figure 8).

AFM-4-ALM-N:



- 1) Cut hole in raised panel for floor box 7-15/16" x 7-15/16".
- 2) (For a moisture-resistant application) Before lowering AFM Box into the hole in the floor, apply a generous bead of caulk/sealant to the perimeter on underside of the Carpet Flange.
- 3) Making sure the Swing Arms are positioned up against the sides of the Box, lower AFM into the hole. Once it seats and with the main Cover removed, using a Phillips screwdriver, turn the 2-1/4" SS screws threaded through the Swing Arms, clockwise until the Arm rotates and stops-then continue tightening the screw(s) until the Arm engages the underside of the flooring (see Figure 9).
- 4) Assemble conduit and fittings to the Floor Box per Local and National Electrical Code requirements.

ACTIVATION

STEP 1) Open Lid to access inside of box

STEP 2) Attach device(s) as required.

STEP 3) Install all wiring and devices in accordance with National and Local Electrical Codes.

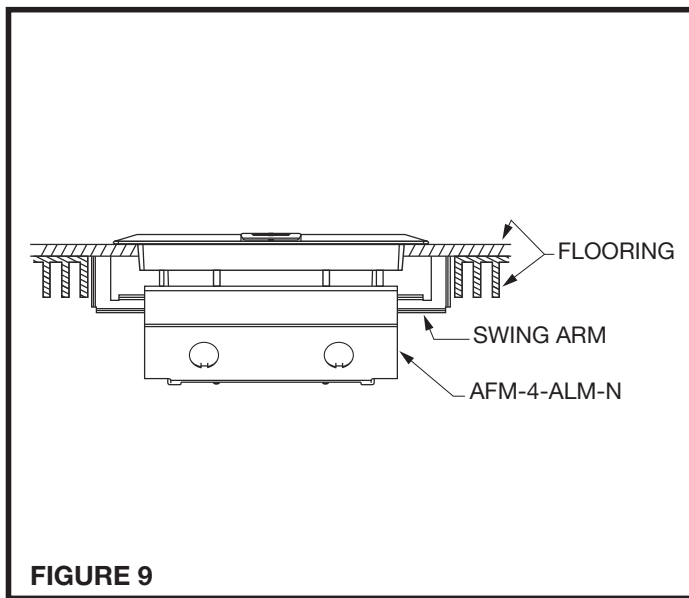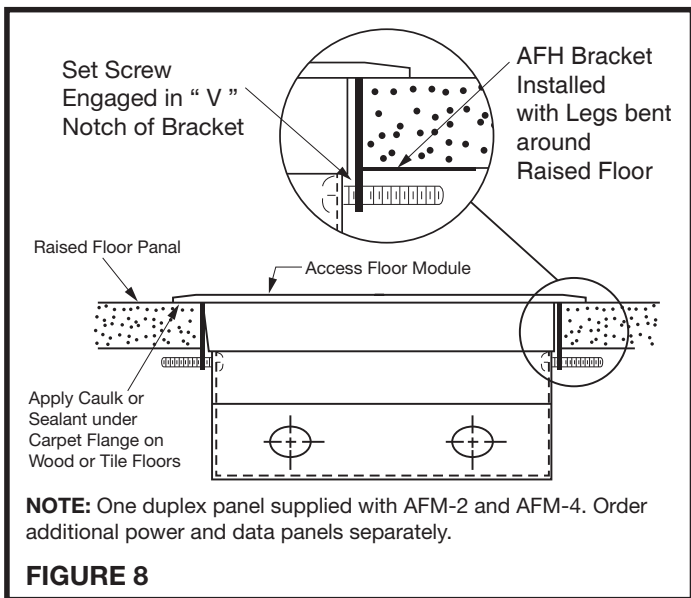

WARRANTY: Thomas & Betts sells this product with the understanding that the user will perform all necessary tests to determine the suitability of this product for the user's intended application. Thomas & Betts warrants that this product will be free from defects in materials and workmanship for a period of two (2) years following the date of purchase. Upon prompt notification of any warranted defect, Thomas & Betts will, at its option, repair or replace the defective product or refund the purchase price. Proof of purchase is required. Misuse or unauthorized modification of the product voids all warranties.

Limitations and Exclusions: THE ABOVE WARRANTY IS THE SOLE WARRANTY CONCERNING THIS PRODUCT, AND IS IN LIEU OF ALL OTHER WARRANTIES EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, WHICH ARE SPECIFICALLY DISCLAIMED. LIABILITY FOR BREACH OF THE ABOVE WARRANTY IS LIMITED TO COST OF REPAIR OR REPLACEMENT OF THE PRODUCT, AND UNDER NO CIRCUMSTANCES WILL THOMAS & BETTS BE LIABLE FOR ANY INDIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES.