



Installing Instructions

CUTTING JAWS

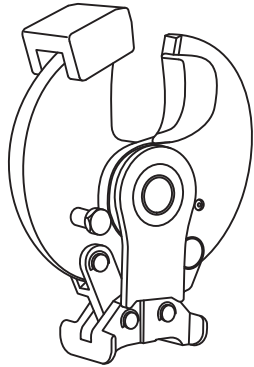

6UNICR-CHCU/AL
Cu — 500 MCM
Al — 1" O.D.

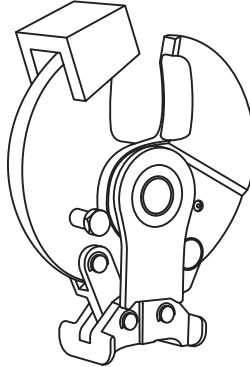

6UNICR-CHASCR
ACSR — 336 MCM
Cu /Al — 350 MCM



ATTACHING THE CUTTING JAW:

The above Cutting Jaws are for use on
TBM6UCR-LI and TBM6UNICR-LI Hydraulic Compression Tools ONLY!

1. Retract the Ram by pressing on the Release Button on the hydraulic tool (see Figure 1).
2. Pull the Slide Pin out disengaging the Compression Jaw from the tool Body Head.
NOTE: Slide Pin stays permanently attached to Body Head.
3. Remove Compression Jaw and position the Cutting Jaw in line with Body Head (see Figure 1).
4. Slide Cutting Jaw into the Body Head (see Figure 1 & 2).
5. Once Cutting Jaw is aligned with the Slide Pin, push the Slide Pin in locking the Cutting Jaw with the Body Head (see Figure 2).
6. The hydraulic tool is ready for operation.

WARRANTY: Thomas & Betts sells this product with the understanding that the user will perform all necessary tests to determine the suitability of this product for the user's intended application. Thomas & Betts warrants that this product will be free from defects in materials and workmanship for the period stated on the enclosed warranty card. Upon prompt notification of any warranted defect, Thomas & Betts will, at its option, repair or replace the defective product. Misuse, misapplication or modification of Thomas & Betts products immediately voids all warranties.

Limitations and Exclusions: THE ABOVE WARRANTY IS THE SOLE WARRANTY CONCERNING THIS PRODUCT, AND IS IN LIEU OF ALL OTHER WARRANTIES EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, WHICH ARE SPECIFICALLY DISCLAIMED. LIABILITY FOR BREACH OF THE ABOVE WARRANTY IS LIMITED TO COST OF REPAIR OR REPLACEMENT OF THE PRODUCT, AND UNDER NO CIRCUMSTANCES WILL THOMAS & BETTS BE LIABLE FOR ANY INDIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES.

Thomas & Betts Corporation
Memphis, Tennessee
www.tnb.com

