

## INSTALLATION INSTRUCTIONS

# **Metallic Covers, concealed servioce top** 664-CST-M series, for use on floor boxes



# 园 In

# Important

Read and understand all instructions and safety information before use. Be aware of proper usage and potential hazards.





#### WARNING:

• Risk of shock, disconnect power before installation.



• Product should be installed by a qualified electrician in accordance with national and local electrical codes.

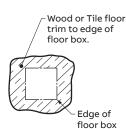

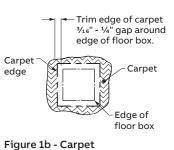

#### Cover types:

Product selection			
Part no:	Cover type	Part no:	Cover type
664-CST-M-ALM	Aluminum	665-CST-M-ALM	Aluminum
664-CST-M-BRS	Brass	665-CST-M-BRS	Brass
664-CST-M-BLK	Black	665-CST-M-BLK	Black
64-CST-M-BLK-CK	Black, Cerakote*	665-CST-M-BLK-CK	Black, Cerakote*

Note: Product must be installed in accordance with applicable national and local electrical codes.

\*Cerakote is a copyright of NIC INDUSTRIES INC®

### 664-CST METALLIC SERIES COVERS:

 
- For use on 664 Series Floor Boxes
- Factory installed on AFM-2 Series access floor modules.

 
### 665-CST METALLIC SERIES COVERS:

- For use on 665 Series Floor Boxes
- Factory installed on AFM-4 Series access floor modules.

#### Installation guide:

- 1. Trim Floor covering to dimension
  - Figure 1a Wood or Tile floor trim.
  - Figure 1b Carpet trim.
- 2. Apply clear silicone sealant as shown:
  - Figure 2a for wood or tile floor covering.
  - Figure 2b for carpet floor covering.
- 3. Lift CST lid and lay to the side. Insert screws and O-rings through cover into threaded holes in metal floor box. Turn screws until heads and O-rings make contact with the Cover. To secure, tighten screws 1½ turns (see Figure 3).





#### **F**lama


 


Figure 2a - Wood or Tile floor



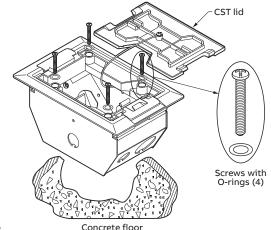


#### Application guide:

## Procedures for using metallic covers

#### A. Using the cover with cords:

- 1. Pull Latch out away from CST lid. CST Lid will pop up (Figure 4).
- 2. Lift CST lid and lay to the side (Figure 5).
- 3. Plug in cords/cables as needed and route over cord ramp. Rotate CST lid around, so that cord slot is located directly over cord ramp and the cords/cables (Figure 6).
- 4. Insert CST lid tab into slot of the cover flange (Figure 7) to close lid. Make certain cords/cables are within the cord slot (Figures 6 and 7).
- 5. Push end of CST lid down and back against latch to snap into place (Figure 7). Use care to prevent CST lid from pinching fingers.

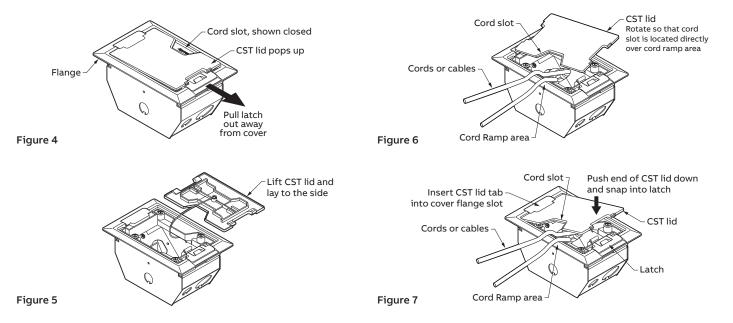

#### B. Closing the cover without cords or cables:

- 1. Follow Steps 1 and 2 in Procedure A.
- 2. Unplug and remove all cords/cables. Rotate cover around so that cord slot feature of the CST Lid is positioned over the seal cap.
- 3. Follow Steps 4 and 5 in Procedure A (See Figure 8).

#### Push CST lid down to snap closed $\neg$

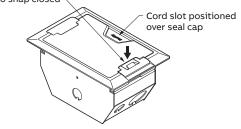


Figure 8

electrification.us.abb.com (US/LATAM) tnb.ca.abb.com (Canada) abb.com Warranty: tnb.abb.com/ecpwarranty We reserve the right to make technical changes or modify the contents of this document without prior notice. With regard to purchase orders, the agreed particulars shall prevail. ABB does not accept any responsibility whatsoever for potential errors or possible lack of information in this document.

We reserve all rights in this document and in the subject matter and illustrations contained therein. Any reproduction – in whole or in part – is forbidden without prior written consent of ABB. © 2023 ABB Installation Products Inc. and/or its related companies. All Rights Reserved.