

ERG4002 / ERG4004 / ERG4005 COMFORT CRIMP® COMPRESSION TOOL WITH SHURE STAKE® MECHANISM CALIBRATION AND GAGING VERIFICATION



IMPORTANT: Read and understand all of the instructions and safety information in this document.


WARNING

KEEP ALL BODY PARTS AWAY FROM DIE NEST DURING GAGING OR CRIMPING PROCEDURE.

WARNING

HANDLES ARE NON-INSULATING. DO NOT CRIMP ON HOT ENERGIZED WIRES.

See gaging table on back page.

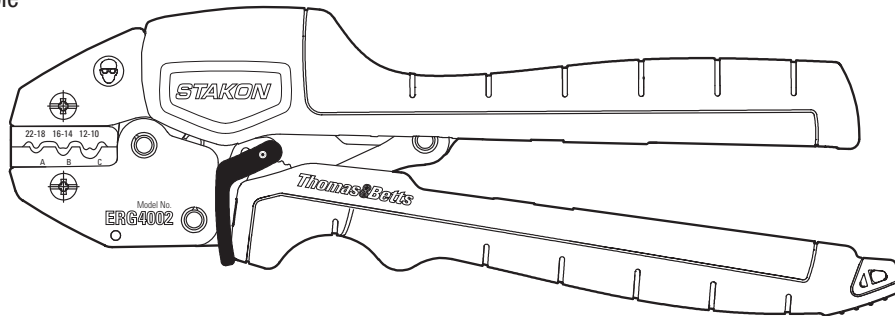

In the event the SHURE STAKE® mechanism must be released, please see Figure 2.

Figure 1

1.0


CALIBRATION VERIFICATION

1.1

SHURE STAKE® Mechanism Check

WARNING

KEEP ALL BODY PARTS AWAY FROM DIE NEST DURING GAGING OR CRIMPING PROCEDURE.

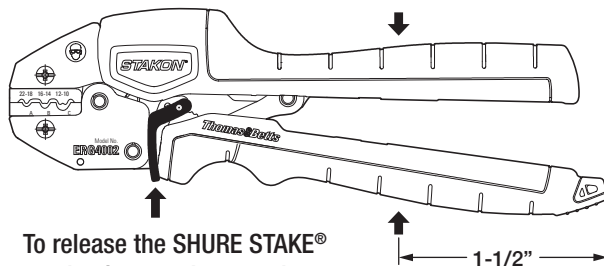

To release the SHURE STAKE® mechanism, push up on the release bar until the ratchet teeth are disengaged.

Figure 2

1. Make certain all pins, pivot points, and bearing surfaces are protected with a THIN coat of any good SAE No. 20 motor oil. DO NOT oil excessively.
2. Squeeze handles until jaws are fully closed but before SHURE STAKE® mechanism releases.
3. Apply a force gradually at 1-1/2" from end of handles until SHURE STAKE® mechanism releases, see Figure 2.
4. The force required to release the SHURE STAKE® mechanism should be 20 lbs minimum and 30 lbs maximum for ERG2005; 15 lbs minimum, and 29 lbs maximum for ERG2002, ERG2004.

2.0

GAGING VERIFICATION

NOTE: Perform Gaging and Calibration Verification at anytime damage to the tool is suspected and on a regular basis to ensure consistent tool performance.

2.1

Visual Inspection

Tool must be free of cracks, sharp edges and any other obvious imperfections that may affect performance of the tool. Nest area must be free of burrs, dents or scratches.

2.2

Gaging Procedure

1. Wipe die nest before gaging.
2. Swing locator away from nests. (Gages are to be inserted on this side.)
3. Close handles until SHURE STAKE® mechanism just trips.
4. Using gage pins, ensure that each nest meets the gaging requirements as specified, in Tables below.

TABLE 1

ERG4002 GAGING REQUIREMENTS		
NEST	GAGING MIN. – MAX.	WIRE SIZE AWG
A	.062 – .067	#22 – #18
B	.084 – .089	#16 – #14
C	.110 – .115	#12 – #10

TABLE 2

ERG4004 GAGING REQUIREMENTS		
NEST	GAGING MIN. – MAX.	WIRE SIZE AWG
A,B	.062 – .067	#22 – #18
C	.112 – .117	#12 – #10

TABLE 3

ERG4005 GAGING REQUIREMENTS		
NEST	GAGING MIN. – MAX.	WIRE SIZE AWG
B	.083 – .089	#16 – #14
C	.118 – .124	#12 – #10
D, E	.176 – .181	#8 – #6

For parts, service, repair and calibration, contact the Thomas & Betts Tool Service Center at 1-800-284-TOOL (8665).

NOTICE: If tool fails any of the above tests, do not attempt repair or adjustment. Call nearest T&B® tool service center to arrange for repair service. Any change, modification or alteration of the tool or use by the customer in a manner other than as specified by T&B® shall void all warranties express or implied and the customer shall, therefore, assume all liability for any damage or injury caused by said changed, modified or altered tool or improper usage or such tool.

WARRANTY: Thomas & Betts sells this product with the understanding that the user will perform all necessary tests to determine the suitability of this product for the user's intended application. Thomas & Betts warrants that this product will be free from defects in materials and workmanship for the period stated on the enclosed warranty card. Upon prompt notification of any warranted defect, Thomas & Betts will, at its option, repair or replace the defective product or refund the purchase price. Proof of purchase is required. Misuse or unauthorized modification of the product voids all warranties.

Limitations and Exclusions: THE ABOVE WARRANTY IS THE SOLE WARRANTY CONCERNING THIS PRODUCT, AND IS IN LIEU OF ALL OTHER WARRANTIES EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, WHICH ARE SPECIFICALLY DISCLAIMED. LIABILITY FOR BREACH OF THE ABOVE WARRANTY IS LIMITED TO COST OF REPAIR OR REPLACEMENT OF THE PRODUCT, AND UNDER NO CIRCUMSTANCES WILL THOMAS & BETTS BE LIABLE FOR ANY INDIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES.